

gpsim

\$Date:: 2020-09-20#\$

# Contents

<b>1</b>	<b>gpsim - An Overview</b>	<b>6</b>
1.1	Making the executable . . . . .	6
1.1.1	Make Details - ./configure options . . . . .	6
1.1.2	RPMs . . . . .	7
1.1.3	Windows . . . . .	7
1.2	Running . . . . .	7
1.3	Requirements . . . . .	8
<b>2</b>	<b>Command Line Interface</b>	<b>9</b>
2.1	attach . . . . .	10
2.2	break . . . . .	11
2.3	clear . . . . .	13
2.4	disassemble . . . . .	14
2.5	dump . . . . .	14
2.6	echo . . . . .	15
2.7	frequency . . . . .	15
2.8	help . . . . .	15
2.9	icd . . . . .	15
2.10	list . . . . .	15
2.11	load . . . . .	16
2.12	macros . . . . .	16
2.13	module . . . . .	18
2.14	node . . . . .	19
2.15	processor . . . . .	20
2.16	quit . . . . .	20
2.17	run . . . . .	20
2.18	step . . . . .	20

<i>CONTENTS</i>	2
2.19 symbol . . . . .	21
2.20 stimulus . . . . .	21
2.21 stopwatch <sup>1</sup> . . . . .	22
2.22 trace . . . . .	23
2.23 version . . . . .	23
2.24 x . . . . .	23
<b>3 Graphical User Interface</b>	<b>24</b>
3.1 Main window . . . . .	24
3.1.1 Menus . . . . .	24
3.1.2 Buttons . . . . .	24
3.1.3 Simulation mode . . . . .	25
3.2 Source Browsers . . . . .	25
3.2.1 .asm Browser . . . . .	25
3.2.2 Opcode view - the .obj Browser . . . . .	26
3.3 Register views . . . . .	27
3.4 Symbol view . . . . .	28
3.5 Watch view . . . . .	28
3.6 Stack viewer . . . . .	29
3.7 Breadboard . . . . .	29
3.8 Trace viewer . . . . .	30
3.9 Profile viewer . . . . .	30
3.10 Stopwatch . . . . .	31
3.11 Scope Window . . . . .	32
<b>4 Scripting and Configuring</b>	<b>33</b>
4.1 Embedded Commands . . . . .	33
4.1.1 .sim macro . . . . .	33
4.1.2 .command macro . . . . .	34
4.1.3 .assert macro . . . . .	34
4.2 Sockets . . . . .	34
<b>5 Assertions and Extended Breakpoints</b>	<b>35</b>
5.1 Assertions and Embedded Simulation commands . . . . .	36
<b>6 Trace and Log: What has happen?</b>	<b>37</b>

<i>CONTENTS</i>	3
<b>7 Simulating the Real World: Stimuli</b>	<b>40</b>
7.1 How They Work . . . . .	40
7.1.1 Contention among stimuli . . . . .	41
7.2 I/O Pins . . . . .	41
7.3 Asynchronous Stimuli . . . . .	42
7.3.1 Analog Asynchronous Stimuli . . . . .	43
7.4 Extended Stimuli . . . . .	43
7.5 Limitations of the Stimulus Mechanism . . . . .	43
7.5.1 Propagation Delays . . . . .	44
<b>8 Modules</b>	<b>45</b>
8.1 gpsim Modules . . . . .	46
8.1.1 USART . . . . .	47
8.1.2 pulsegen . . . . .	47
8.1.3 FileStimulus . . . . .	48
8.1.4 FileRecorder . . . . .	48
8.1.5 PortStimulus . . . . .	48
8.1.6 Logic . . . . .	49
8.1.7 I2C EEPROM . . . . .	51
8.1.8 Switches & Resistors . . . . .	52
8.1.9 Voltage Sources, Resistors, and Capacitors . . . . .	52
8.1.10 LED_7SEGMENTS and LED . . . . .	52
8.1.11 I2C slave to Parallel port . . . . .	53
8.2 Extras Modules . . . . .	54
8.2.1 Temperature and humidity sensor - DHT11 . . . . .	54
8.2.2 64 x 8, Serial, I2C Real-Time Clock - DS1307 . . . . .	55
8.2.3 High-Precision 1-Wire Digital Thermometer - DS1820 Family	55
8.2.4 Character LCD - HD44780 . . . . .	55
8.2.5 Graphic LCD - SED1530 . . . . .	56
8.2.6 LCD_7Seg . . . . .	56
8.2.7 Solar . . . . .	56
8.3 Writing new modules . . . . .	57
<b>9 Symbolic Debugging</b>	<b>59</b>
<b>10 Macros</b>	<b>60</b>
<b>11 Hex Files</b>	<b>61</b>

<i>CONTENTS</i>	4
<b>12 The ICD- Not Supported in versions 0.21.0 and later</b>	<b>62</b>
<b>13 Examples</b>	<b>64</b>
<b>14 Regression Tests</b>	<b>65</b>
<b>15 Theory of Operation</b>	<b>66</b>
15.1 Background . . . . .	66
15.2 Instructions . . . . .	66
15.3 General File Registers . . . . .	67
15.4 Special File Registers . . . . .	67
15.5 Example of an instruction . . . . .	68
15.6 Trace . . . . .	69
15.7 Breakpoints . . . . .	69
15.8 TIMER1 External input . . . . .	70
<b>16 LICENSES</b>	<b>71</b>
16.1 Gpsim.lyx . . . . .	71
16.2 Gpsim . . . . .	71
16.3 Libraries libgpsim, libgpsim_modules, libgpsim_eXdbm . . . . .	71

# Introduction

gpsim is a full-featured software simulator for Microchip PIC microcontrollers distributed under the GNU General Public License and GNU Lesser Public License (see the LICENSE section).

gpsim has been designed to be as accurate as possible. Accuracy includes the entire PIC - from the core to the I/O pins and including ALL of the internal peripherals. Thus it's possible to create stimuli and tie them to the I/O pins and test the PIC the same way you would in the real world.

gpsim has been designed to be as fast as possible. Real time simulation speeds of 20Mhz pics are possible.

gpsim can be controlled from either a graphical user interface (GUI), a command line interface (CLI) or by a remote process. Typical debugging features like breakpoints, single stepping, disassembling, memory inspect & change, and so on are all supported. In addition, complex debugging features like real time tracing, assertions, conditional breaks, and plugin modules to name a few are also supported.

# Chapter 1

## gpsim - An Overview

If you don't care to wade through details, this chapter should help you get things up and running. The INSTALL and README files will provide more up-to-date information than this document, so please refer to those first.

### 1.1 Making the executable

gpsim's executable is created in a manner that's consistent with much of the other open source software:

command	description
<code>tar -xvzf gpsim-x.y.z.tar.gz</code>	expand the compressed tar file
<code>./configure</code>	Create a 'makefile' unique to your system
<code>make</code>	compile gpsim
<code>make install</code>	install gpsim

The last step will require root privileges.

#### 1.1.1 Make Details - ./configure options

##### gui-less

The default configuration will provide a gui (graphical user interface). The cli (command line interface) is still available, however many people prefer just to use the cli. These hardy souls may build a command-line only interface by configuring gpsim:

```
./configure --disable-gui
```

##### debugging

If you want to debug gpsim then you will probably use gdb. Consequently, you will want to disable shared libraries:





Typically `gpsim` will be invoked like:

```
[My-Computer]$ gpsim mypic-program.cod
```

(The `[My-Computer]$` text is an example of a typical bash command prompt - you will only type the text after this prompt). This loads the `.cod` file generated by `gputils`.

Under Windows, `gpsim` can also be invoked by navigating through the Start/Program menu. This will open a DOS window to provide access to the command line interface. It's also possible to open a DOS window (or CygWin bash session) and invoke `gpsim` from there.

### 1.3 Requirements

`gpsim` has been developed under Linux. It should build and run just fine under the popular Linux distributions like Fedora, Ubuntu, etc. `gpsim` has also been ported to the MAC, MicroSoft Windows, Solaris, and BSD. Two packages `gpsim` requires that may not be available with all Linux distributions are `readline` and `gtk` (the gimp tool kit). The `.configure` script should tell you if these packages are not installed on your system or if the revisions that are installed are too old.

There are no minimum hardware requirements to run `gpsim`. Faster is better though!

`gputils`, the `gnupic` utilities package, is also very useful. `gpsim` will accept straight hex files, but if you want to do any symbolic debugging then you will want to use the `.cod`<sup>1</sup> files that `gputils` produces. The `.cod` files are in the same format as the `.cod` files `MPASM`<sup>2</sup> produces.

---

<sup>1</sup>.cod files are symbol files that were created by ByteCraft and are used by Microchip.

<sup>2</sup>MPASM is Microchip's Assembler.

## Chapter 2

# Command Line Interface

The command line interface is fairly straight-forward. The table below summarizes the available commands. Brief descriptions of these commands can also be displayed by typing *help* at the command line.

command	summary
attach	Attach stimuli to nodes
break	Set a break point
bus	Add or display node busses
clear	Remove a break point
disassemble	Disassemble the current cpu
dump	Display either the RAM or EEPROM
frequency	Set processor frequency
help	Type help "command" for more help on a command
icd	In Circuit Debugger support.
list	Display source and list files
load	Load either a hex or command file
log	Log/record events to a file
node	Add or display stimulus nodes
module	Select & Display modules
processor	Add/list processors
quit	Quit gpsim
reset	Reset all or parts of the simulation
run	Execute the pic program
set	display and control gpsim behavior flags
step	Execute one or more instructions
stimulus	Create a stimulus
stopwatch	Measure time between events
symbol	Add/list symbols
trace	Dump the trace history
version	Display gpsim's version
x	(deprecated) examine and/or modify memory

The built in 'help' command provides additional online information.

## 2.1 attach

```
attach node1 stimulus1 [stimulus2 stimulus_N]
```

Attach is used to define connections between one or more stimulus and a node. One node and at least one stimulus must be specified, but in general two or more stimuli are used. Attach can be viewed as wiring stimuli together, with the node acting as the wire. A stimulus is either a CPU or module I/O pin or a stimulus name.

Attach\_pointN can have one of the following formats

pin(<number>) or pin(<symbol>)

This refers to a pin of the current active CPU.

<number> is the pin number

<symbol> is an integer symbol whose value is a pin number

<connection> or pin(<connection>)

These two forms are treated exactly the same ( i.e. the pin() has no meaning).

<connection> is a stimulus name or an I/O pin name.

I/O pin name can be just the pin name for the CPU or <module\_name>.pin\_name for a module or CPU

Example

```

**gpsim> load instructions_14bit.cod      # load code
**gpsim> module library libgpsim_modules #load module lib
**gpsim> module load usart U1           # create USART
**gpsim> node n1                        # define a node
**gpsim> node n2                        #define another node
**gpsim> symbol TWO=2                   #define symbol with value 2
**gpsim> attach n1 pin(1) pin(TWO)      #attach CPU pins 1 and 2
**gpsim> attach n1 U1.RXPIN            #add usart pin to n1
**gpsim> attach n2 portb0 pin(U1.TXPIN) #connect portb0 to UASRT TX pin
**gpsim> node                           # show results

```

## 2.2 break

The break command is used to set and examine break points. New break points are assigned a unique number. This number can be used to query or clear the break point. Break points halt the simulation when the condition associated with them is true. Break points are ignored during single stepping. See chapter 5 for more examples of break-points.

### Examining break points

```
break [bp_number]
```

Break points can be examined by typing the break command without any options. Specific breaks can be queried by specifying the break point number.

### Program Memory/Execution breaks

The most common break point is an execution break point. This one halts execution whenever the program counter reaches the address at which the break point is set. The syntax is:

```
break e|r|w ADDRESS [,expr [,message]]
```

The simulation halts when the address is executed, read, or written. The ADDRESS can be a symbol or a number. If the optional expression is specified, then it must evaluate to true before the simulation will halt. The optional message allows a description to be associated with the break. The read and write options only apply to those processors that can manipulate their own program memory.

### Register Memory breaks

gpsim can also associate break points with register accesses. This is useful for capturing bugs that stomp on RAM. E.g. you can say something like “halt execution whenever bit 4 of register 42 is cleared”. The command line syntax is:

```
break r|w|ch REGISTER [,expr [,message]]
```

The simulation halts when REGISTER is read, written, or changed on write, and the optional expression evaluates to true.

Other syntaxes with a boolean expression are:

```
break r|w|ch REGISTER == value
```

The simulation halts when REGISTER is assigned the specified value, and:

```
break r|w|ch REGISTER & mask == value
```

The simulation halts when specified bits in REGISTER are assigned the specified value.

Here’s an example of a register write break. This one will halt the simulation if any value is written to the variable named *temp1*.

```
break w temp1
```

Sometimes it’s necessary to specify an auxiliary condition with a break point. For example, there may be a temporary variable that is shared throughout the code. You may wish to trap writes to that variable only while executing a specific subroutine. For example, the following break point triggers when temp1 is written and while the program counter is in between the labels *func\_start* and *func\_end*:

```
break w temp1, (pc >= func_start && pc < func_end)
```

*TIP:* Use this type of break point if you suspect an interrupt routine is over writing a variable.

Another situation is one where you wish to trap writes to a variable only if some other variable is a certain value:

```
break w temp1, (CurTask & 0x0f != 0b101)
```

If the firmware writes to the variable `temp1` then the simulation will halt if the lower nibble of `CurTask` is not equal to 5.

This example breaks only if the hex digit 'C' is written to the upper nibble of `temp1`:

```
break w (temp1 & 0b11110000) == 0b11000000
```

### Processor exception breakpoints

Stack overflow, underflow and watchdog timeout can also halt the simulation.

```
break so
break su
break wdt
```

### Attribute Breakpoints

```
break attribute
```

`gpsim` also supports a concept of *attribute breakpoints*. Attributes are parameters that `gpsim` and its modules expose to the user interface. For example, the simulator stop-watch exposes attributes which support breakpoints. This feature is intended mainly for module writers to provide a mechanism for allowing the user to control the module.

### Cycle counter Breakpoints

```
break c cycle_number
```

The cycle counter is `gpsim`'s time keeper. It increments once every instruction cycle. The 'c' option to the break command allows a break point to be set at a particular value of the cycle counter.

## 2.3 clear

```
clear bp_number
```

The `clear` command is used to clear break points. The break point number must be specified. The `break` command without any arguments displays all of the currently defined break points. This can be used to ascertain the break point number. Once cleared, a break point is deleted. <sup>1</sup>

---

<sup>1</sup>A break point disable/enable feature has been discussed and may be added a future date.

## 2.4 disassemble

```
disassemble [[begin:end] | [count]]
```

The `disassemble` command decodes the program memory opcodes into their standard mnemonics. With no options, the `disassemble` command disassembles instructions surrounding the current program counter:

```
gpsim> disassemble
current pc = 0x1c
    0012 2a03 incf reg3,f,0
    0014 0004 clrwdt
    0016 5000 movf reg,w,0
    0018 1001 iorwf reg1,w,0
    001a 1002 iorwf reg2,w,0
==> 001c 1003 iorwf reg3,w,0
    001e e1f4 bnz $-0x16 ;(0x8)
    0020 d7ff bra $-0x0 ;(0x00020)
```

With a single numeric option, the `disassemble` command will disassemble given number of instructions starting with the instruction at the PC.

With a two numbers, the `disassemble` command will disassemble instructions starting and ending given number of instructions from the PC.

## 2.5 dump

```
dump [r | s | e [module_name [filename]]]
```

`dump r` or `dump` with no options will display all of the file registers and special function registers.

`dump s` will display only special function registers.

`dump e` will display the contents of the processor EEPROM (if the pic being simulated contains any).

The `'dump e module_name'` command will display the contents of an EEPROM where `module_name` can either be the name of a module or processor which contains an EEPROM.

The `'dump e module_name filename'` command dumps the contents of a module's EEPROM, in Intel hex format, into the file with the given name. The `'load e'` command can later be used to read the dumped file thus allowing the contents of the EEPROM to be preserved between runs of `gpsim`.

See the `'x'` command for examining and modifying individual registers.

## 2.6 echo

The echo command is used like a print statement within configuration files. It just lets you display information about your configuration file.

## 2.7 frequency

This command sets the oscillator frequency. By default gsim uses 20 MHz oscillator. The oscillator frequency is used to compute time in seconds. Use this command to adjust this value. If no value is provided this command prints the current frequency. Note that PICs have an instruction frequency that's a quarter of the oscillator frequency clock.

## 2.8 help

```
help [command]
```

By itself, help will display all of the commands along with a brief description on how they work. With a command as a parameter help provides more extensive online help. The help command can also display information about attributes.

## 2.9 icd

```
icd [open <port>]
```

The open command is used to enable ICD mode and specify the serial port where the ICD is. (e.g. "icd open /dev/ttyS0"). Without options (and after the icd is enabled), it will print some information about the ICD.

## 2.10 list

The list command allows you to view the source code while you are debugging.

```
list [[s | l] [*pc] [line_number1 [,line_number2]]]
```

Without any options, list will use the last specified options.

list s will display lines in the source (or .asm) file.

list l will display lines in the .lst file.

list \*pc will display either .asm or .lst lines around the PC. Without \*pc use current PC as a reference.

Line numbers are relative to the line of the PC.



## 2.11 load

The load command is used to load a program file, a command file, or eeprom data.

Program file is usually used to program the physical part. A .hex file provides no symbolic information. .cod files on the other hand, do provide symbolic information. The only reason to use a hex file is when there's no .cod file available.

The syntax for loading program files is:

```
load [procestortype] programfile [label]
```

Gpsim will automatically determine if the file is a .hex or .cod file. The optional *procestortype* is needed if a .hex file is being loaded and the processor type is not yet defined.

The optional *label* is used to identify the processor module on the breadboard and as the prefix in the symbol table. If a label is not given then the processor type is used for this functionality.

```
load [i] commandfile.stc
```

Command files contain gpsim commands. These are extremely useful for creating a debugging environment that will be used repeatedly. Normally loading a command file residing in other directories changes working directory. This can be overridden with the 'i' (include) option.

```
load e module_name file
```

This command loads the contents of either a processor's EEPROM or an EEPROM module from a file containing the data in Intel hex format. In either case the address of the first cell of the EEPROM is 0x0000. Used in conjunction with the 'dump e module\_name filename' command, the contents of an EEPROM can be carried over from one run of gpsim to another.

## 2.12 macros

Macros are defined like:

```
name macro [arg1, arg2, ..., argN]
  macro body
endm
```

And they're invoked by:

```
name param1, param2, ..., paramN
```

Macros are a way of collecting several parameterized commands into one short command. The first line of a macro definition specifies the macro's name and optional arguments. The *name* is used to invoke the macro. The arguments are text string place holders. When a macro is invoked, the parameters are aligned with the arguments. I.e. *param1* in the invocation can be thought of being assigned to *arg1* in the definition. The parameters replace the arguments in the macro body.

In the following example, a variable or attribute called *mac\_flags* is being manipulated in an expression. The arguments *add* and *mask* appear in the macro body and provide a parameterized way of manipulating this expression.

```
mac_exp macro add, mask
    mac_flags = (mac_flags+add) & mask
endm
```

Note that the indentation is arbitrary. The macro is invoked by:

```
mac_exp 1, 0b00001111 # increment the lower nibble
```

The parameter *add* is replaced by the number *1* while *mask* is replaced with the binary number *0b00001111*. The invocation turns into the *gpsim* command:

```
mac_flags = (mac_flags+1) & 0b00001111
```

### Nested Macros

The macro body can contain any *gpsim* command. Of particular interest are macro invocations within other macros. Here's another macro that invokes the one defined above.

```
# Nested macro example
mac1 macro p1, p2
    run
    mac_exp p1, p2
endm
```

And it could be used like:

```
mac1 1, 0b00001111 # test lower nibble
mac1 (1<<4), 0b11110000 # test upper nibble
```

The first invocation starts the simulator by executing a *run* command. When a break point is encountered, control returns to the command line and the *mac\_exp* macro is invoked.

### Displaying Defined Macros

All currently defined macros can be displayed by typing the macro command without a name or arguments:

```
gpsim> macro
mac1 macro p1 p2
    run
    mac_exp p1, p2
endm
mac_exp macro add mask
    mac_flags = (mac_flags+add) & mask
endm
```

## 2.13 module

The *module* command is used to load and query external modules (see section 8 for more information about gpsim modules). A module is a special piece of software that can extend gpsim in some manner. LED's and switches are examples of modules. A module library is collection of modules.

### Loading module libraries

```
module lib lib_name
```

The *lib* option is used to load a module library. Module libraries are system dependent shared libraries, i.e. on Windows they're DLL's and UNIX they're shared libraries. This means that either the libraries should reside in a path where the OS knows libraries exist or that the full path name must be specified along with the *lib\_name*. gpsim provides a module library with a few modules:

```
gpsim> module lib libgpsim_modules
```

### Displaying available modules

```
module list
```

The *list* option will display all of the modules that can be loaded. Here is an example of gpsim's built-in modules.

```
gpsim> module list
Module Library Files
libgpsim_modules.so
    switch
    and2
```

```
or2
xor2
not
led_7segments
led
push_button
PortStimulus
pullup
pulldown
pulsegen
Encoder
usart
TTL377
I2C-EEPROM2k
I2C-EEPROM16k
I2C-EEPROM256k
```

### Loading a specific module

```
module load module_type [module_name]
```

Once a library has been loaded, specific modules can be instantiated. The *module\_type* is what's displayed by the *module list* command. The optional module name specifies what the instance is called. Here's an example

```
gpsim> module load led D1
```

### Display loaded modules

```
module
```

### Querying modules

Dumping modules and listing the pins is not yet implemented.

## 2.14 node

```
node [new_node1 new_node2 ...]
```

The *node* command defines or queries “nodes”, used to connect external signals to the simulated PIC. If no *new\_node* is specified then all of the nodes that have been defined are displayed. If a *new\_node* is specified then it will be added to the node list. See the “attach” and “stimulus” commands to see how stimuli are added to the nodes.

```

examples:
node          // display the node list
node n1 n2 n3 // create and add 3 new nodes to the list

```

## 2.15 processor

```
processor [new_processor_type [new_processor_name]] | [list] | [pins]
```

The *processor* command is used to either define a new processor or to query one that has already been defined. Normally there's no need to explicitly define the processor since the symbol file already contains that information. The two exceptions are when a) the symbolic information is not available or b) you wish to override the processor specified in the symbol file. (See the *load* command on how the processor in a symbol file can be overridden.)

To see a list of the processors supported by gpsim, type '*processor list*'. To display the state of the I/O processor, type '*processor pins*'. For now, this will display the pin numbers and their current state.

```

examples:
processor          // Display the processors you've already defined.
processor list    // Display the list of processors supported.
processor pins    // Display the processor package and pin state
processor p16cr84 fred // Create a new processor.
processor p16c74 wilma // and another.
processor p16c65      // Create one with no name.

```

## 2.16 quit

Quit gpsim.

## 2.17 run

Start (or continue) simulation. The simulation will continue until the next break point is encountered.

## 2.18 step

Execute a single instruction, or a specified number of instructions.

```
step [over | n]
```

With no arguments, the `step` command executes one instruction of the PIC code. If a numeric argument is given, this specifies a fixed number of instructions to simulate. The specific word “over” as an argument to `step` tells `gpsim` to run everything involved in the current instruction. This would normally be used on a `CALL` instruction, in which case the whole subroutine runs and the simulation stops after it returns.

## 2.19 symbol

```
symbol [symbol_name [symbol_type value]]
```

The *symbol* command is used to query and define symbols. If no options are specified, the whole symbol table is displayed. The creation of user defined symbols is limited at this time (see the online help for the current state of this command).

## 2.20 stimulus

```
stimulus [[type] options]
```

The *stimulus* command creates a signal that can be tied to a node or an attribute. If no options are specified then all currently defined stimuli are displayed.

Note that in most cases it is easier to create a stimulus file then to type the command by hand.

initial_state	state at the start and at the rollover
start_cycle	simulation cycle when the stimulus will begin
period	stimulus period
name	specifies the stimulus name

Here’s an example of a stimulus that will generate two pulses and repeat this in 1000 cycles.

```
stimulus asynchronous_stimulus
# The initial state AND the state the stimulus is when
# it rolls over
initial_state 0
start_cycle 0
# the asynchronous stimulus will roll over in 'period'
# cycles. Delete this line if you don't want a roll over.
period 1000
{ 100, 1,
  200, 0,
  300, 1,
  400, 0
```

```

}
# Give the stimulus a name:
name two_pulse_repeat
end

```

A stimulus can be queried by typing its name at the command line:

```

gpsim> two_pulse_repeat
two_pulse_repeat attached to pulse_node
  Vth=0V Zth=250 ohms Cth=0 F nodeVoltage= 7.49998e-07V
  Driving=0 drivingState=0 drivenState=0 bitState=0
  states = 5
    100 1
    200 0
    300 1
    400 0
    1000 0
  initial=0
  period=1000
  start_cycle=0
  Next break cycle=100

```

Even though this example uses 1's and 0's for the data, one can use integers, floating point numbers, or expressions instead. Integers are useful for supplying a stimulus to an attribute. Expressions are useful for abstracting the data. See Chapter 7 for more discussion and examples of stimuli.

## 2.21 stopwatch<sup>2</sup>

```

A timer for monitoring and controlling the simulation.
The units are in simulation cycles.
  stopwatch.rollover - specifies rollover value.
  stopwatch.direction - specifies count direction.
  stopwatch.enable - enables counting if true.

```

Without any options, *stopwatch* will display the contents of the stopwatch timer. *stopwatch* is writable, so you may initialize it to whatever value you like. The behavior of the timer may be manipulated via the three attributes. The *.rollover* attribute is the number of cycles at which the stopwatch timer rolls over. The *.direction* and *.enable* attributes are boolean types. When true, the *.direction* attribute will instruction the stopwatch to count up.

---

<sup>2</sup>The stopwatch is really a collection of attributes and not a command. But the behavior is so similar to a command that it has been included here.

## 2.22 trace

```
trace [dump_amount]
```

*trace* will print out the most recent "dump\_amount" traces. If no *dump\_amount* is specified, then the entire trace buffer will be displayed.

## 2.23 version

```
version
```

Display *gpsim*'s version. Note, this command will probably get replaced by an attribute with the same (or similar) name.

## 2.24 x

The *x* command is deprecated. It's former use was to examine and modify memory. The preferred way to do this now is with expressions. The help for *x* now indicates this:

```
x examine command -- deprecated
  Instead of the using a special command to examine and modify
  variables, it's possible to directly access them using gpsim's
  expression parsing. For example, to examine a variable:
gpsim> my_variable
my_variable [0x27] = 0x00 = 0b00000000
  To modify a variable
gpsim> my_variable = 10
  It's also possible to assign the value of register to another
gpsim> my_variable = porta
  Or to assign the results of an expression:
gpsim> my_variable = (porta ^ portc) & 0x0f
```



## Chapter 3

# Graphical User Interface

FIXME: We could use a few illustrations here!

gpsim also provides a graphical user interface that simplifies some of the drudgery associated with the cli. It's possible to open windows to view all the details about your debug environment. To get the most out of your debugging session, you will want to assemble your code with gpasm (the gnupic assembler) and use the symbolic .cod files it produces.

### 3.1 Main window

#### 3.1.1 Menus

File->Open        .stc or .cod files.  
File->Quit        Quit gpsim  
Windows->\*        Open/Close the windows.

#### 3.1.2 Buttons

(These are also found as keyboard bindings in the source windows.)

Step                Step one instruction  
Over                Step until pc is after next instruction  
Finish              Run to return address  
Run                 Run continuously  
Stop                Stop execution  
Reset                Reset CPU

### 3.1.3 Simulation mode

This controls how gpsim simulates, and how the GUI updates.

Never	Don't ever update the GUI when simulating. This is the fastest mode. You will have to stop simulation by pressing Ctrl-C in the command line interface.
x cycles	Update the GUI every x cycles simulated.
every cycle	Update the GUI every cycle. (you see everything, if you have filled up on coffee :-)
x ms animate	Here you can slow down simulation with a delay between every cycle.
realtime	This will make gpsim try to synchronize simulation speed with wall clock time.

## 3.2 Source Browsers

gpsim provides two views of your source: `.asm` and `.obj` browsers. The `.asm` browser is a color coded display of your pic source.

### 3.2.1 .asm Browser

When a `.cod` file with source is loaded, there should be something in this display. (TODO: add section about high level debugging).

There is an area to the left of the source, where symbols representing the program counter, breakpoints, etc are displayed. Double clicking in this area toggles breakpoints. You can drag these symbols up or down in order to move them and change the PC or move a breakpoint.

A right button click on the source pops up a menu with six items (the word 'here' in some menu items denote the line in source the mouse pointer was on when right mouse button was clicked.):

Menu item	Description
Find PC	This menu item will find the PC and changed page tab and scroll the source view to the current PC.
Run here	This sets a breakpoint 'here' and starts running until a breakpoint is hit.
Move PC here	This simply changes PC to the address that line 'here' in source has.
Breakpoint here	Set a breakpoint 'here'.

Profile start here	Set a start marker for routine profiling here.
Profile stop here	Set a stop marker. (See the section for the profiling window.)
Select symbol.	This menu item is only available when some text is selected in the text widget. What it does is search the list of symbols for the selected word, and if it is found it is selected in the symbol window. Depending of type of symbol other things are also done, the same thing as when selecting a symbol in the symbol window: <ul style="list-style-type: none"> <li>• If it is an address, then the opcode and source views display the address.</li> <li>• If it's a register, the register viewer selects the cell.</li> <li>• If it's a constant, address, register or ioport, it is selected in the symbol window.</li> </ul>
Find text	This opens up a search dialog. Every time you hit the 'Find' button, the current notebook page is found and the source in that page is used.
Settings	A dialog with which you can change the fonts used.
Controls	A submenu containing the simulation commands. (these are also found as keyboard bindings (recommended), or in the main window.)

These are the keyboard bindings:

<b>Key</b>	<b>command</b>
s,S,F7	Step one instruction.
o,O,F8	Step over instruction
r,R,F9	Run continuously.
Escape	Stop simulation.
f,F	Run to return address
1..9	Step n instructions
ctrl-f	Find text

### 3.2.2 Opcode view - the .obj Browser

This window has two tabs. One with each memory cell on one line and information about address, hexadecimal value and decoded instruction (i.e. disassembly), and one with the program memory displayed with sixteen memory cells per row and a configurable ASCII column.

**The Assembly tab you can:**

- Double click on a line to toggle breakpoints.
- Right click to get a menu where the breakpoint can be set or cleared on the selected line.
- Under 'Settings' you can change the font.

**The Opcode tab.**

Here the program memory is ordered as columns of sixteen memory cells per column and as many row as needed to contain all memory.

The seventeenth column contains an ASCII representation of the program memory.

You can change font with the menu item 'Settings'.

The breakpoints can be set or cleared on one or more (drag the mouse to select more cells) addresses with the right click menu.

### 3.3 Register views

There are two similar register windows. One for the RAM and one for the EEPROM data, when available.

Here you see all registers in the current processor. Clicking on a cell displays it's name and value above the sheet of registers. You can change values by entering it in the entry (or in the spreadsheet cell).

The following things can be done on one register, or a range of registers. (Selecting a range of registers is done by holding down left mouse button, moving cursor, and releasing button.)

- Set and clear breakpoints. Use the right mousebutton menu to pop up a menu where you can select set read, write, read value and write value breakpoints. You can also "clear breakpoints", notice the s in "clear breakpoints", every breakpoint on the registers are cleared.
- Set and clear logging of registers. You can log reads, writes, reads/writes of specific values and to bits selected by a specified mask. You can select a different file name with 'set log filename...'. Default is "gpsim.log". You can choose LXT or ASCII format. LXT can be read with the program gtkwave. ASCII is default.
- Copy cells. You copy cells by dragging the border of the selected cell(s).
- Fill cells. Move mouse to lower right corner of the frame of the selected cell(s), and drag it. The one cell's contents will be copied to the other cells.
- Watch them. Select the "Add Watch" menu item.

The cells have different background colors depending on if they represent:

- File Register (e.g. RAM): light cyan.
- Special Function Registers (e.g. STATUS, TMR0): dark cyan
- aliased register (e.g. the INDF located at address 0x80 is the same as the one located at address 0x00): gray
- invalid register: black. If all sixteen registers in a row are invalid, then the row is not shown.
- a register with one or more breakpoints: red. Logged registers are also red.

gpsim dynamically updates the registers as the simulation proceeds. Registers that change value between updates of the window during simulation are highlighted with a blue foreground color.

The menu also has a 'settings' item where you can change the font used.

### 3.4 Symbol view

This window, as its name suggests, displays symbols. All of the special function registers will have entries in the symbol viewer. If you are using .cod files then you will additionally have file registers (that are defined in cblocks), equates, and address labels. You can filter out some symbol types using the buttons in the top of the window, and you can sort the rows by clicking on the column buttons (the ones reading 'symbol', 'type' and 'address').

You can add the symbol to the watch window by right-clicking and selecting the "Add to watch window" menu item. This will add the ram register with address equal to the symbols value to the watch window.

The symbol viewer is linked to the other windows. For example, if you click on a symbol and:

- If it is an address, then the opcode and source views display the address.
- If it's a register, the register viewer selects the cell.

### 3.5 Watch view

This is not a output-only window as the name suggests (change name?). You can both view and change data. Double-clicking on a bit toggles the bit. You add variables here by marking them in a register viewer and select "Add watch" from menu. The right-click menu has the following items:

- Remove watch

- Set register value
- Clear Breakpoints
- Set break on read
- Set break on write
- Set break on read value
- Set break on write value
- Columns...

"Columns..." opens up a window where you can select which of the following data to display:

- BP
- Type
- Name
- Address
- Dec
- Hex
- Bx (bits of word)

You can sort the list of watches by clicking on the column buttons. Clicking twice sorts the list backwards.

### 3.6 Stack viewer

This window displays current stack. Selecting an entry makes the code windows display the return address. Double clicking sets a breakpoint on the return address.

### 3.7 Breadboard

Here you can create/modify and examine the environment around the pic. Pins are displayed as an arrow. The direction of the arrow indicates if its an input or output pin. The color of the arrow indicates its state (green=low, red=high).

You can't instantiate pic processors from here, you will have to do that from the command line, or from a .stc file.

You can create nodes by clicking on the "new node" button. (A node is 'a piece of wire' to which you can connect stimulus.) You can see the list of created nodes under the "nodes" item in the upper-left tree widget.

You can create connections to nodes by clicking on a pin, and then clicking on the button "Connect stimulus to node". This will bring up a list of nodes. Choose one by double-clicking on the one you like.

If you click on a pin that is already connected to a node, then you will see the node and its connections in the lower left part of the window. You can disconnect a stimulus by clicking on it and pressing the "remove stimulus" button.

When you want to add a module to the simulation, you first have to specify the library which contains the module you want. Click on the "add library" button and enter the library name (e.g. "libgpsim\_modules.so"). Now you can click the "add module" button. Select the module you want from the list by double-clicking on it. Enter a name for the module (this has to be unique, and not used before). You now have to position the module. Move the mouse pointer to where you would like the module, and left-click.

If you middle-click on a pin, you will see how the pin is connected. Press the "trace all" to see all at

once, and "clear traces" to remove all (you will only remove the graphical trace, not the connection!). If the tracing doesn't work, try moving the packages so that there are more space around the pins.

When you are done, you can save by clicking the "save configuration" button. You can then load this file from the command line like this (assuming the .cod file with your source is called "mycode.cod", and the file you just saved was called "mynets.stc"):

```
gpsim -s mycode.cod -c mynets.stc
```

You can't load only the .stc file since this doesn't contain the processor type and code. You can create (with an editor) your own .stc file (e.g. my\_project.stc) and in that file put a command "load c mynets.stc" after you have loaded the .cod file. You then only have to load this file (gpsim -c my\_project.stc).

## 3.8 Trace viewer

This window shows the trace of instructions executed. See 6.

## 3.9 Profile viewer

This window show execution count for program memory addresses. The profile window must be opened before starting simulation, because the tracing is not enabled by default.

**Instruction profile**

This shows the number of times each instruction are executed.

**Instruction range profile**

Here you can group ranges of instruction into one entry.

The right click menu contains:

Remove range	Remove an entry.
Add range...	Open a dialog from where you can add a range of instructions as an entry.
Add all labels	Add all code labels as ranges.
Snapshot to plot	Open a window containing a graph of the data. From this new window you can also save (postscript) or print it.

**Register profile**

This shows the number of reads or writes the simulator does on register.

**Routine profile**

Here you can see statistics about execution time for a selected routine. You mark the entry and exit points from the source browser (profile start/stop). If the routine you want to measure have multiple entry and/or exit points, then you have to put a marker on every entry point as well as (and especially) every exit point. Otherwise you will get bad data.

When you have done that, gpsim will (as simulation goes by) store the execution times of that routine and calculate min/max/average/etc. You can also use the menu item 'Plot distribution' to open a window displaying a histogram of the data. From this new window you can also save (in postscript) or print it.

You can also measure call period by switching the 'entry' and 'exit' points. If also want the time from reset (or some equal point) to the first 'entry', then you must also put an 'entry' point there.

## 3.10 Stopwatch

The stopwatch window shows a cycle counter and a re-settable counter. The cycle counter is the same as the one in the register window. It basically counts instructions.

The other counter counts at the same rate as the cycle counter, but can be cleared by clicking the "clear" button (or preset by entering a number in the entry box).



The up/down indicator denotes the direction the counter counts.

The rollover value specifies the range the cycle counter can be in (a modulo counter). For example, if the rollover value is specified to be 0x42, then whenever the resettable counter reaches 0x42 it will rollover to zero. If the counter is counting down, then when it reaches 0 the next state will be 0x41. If you don't want it like this, then set the rollover value to something large.

### 3.11 Scope Window

FIXME: The scope window still needs some work...

The Scope Window graphs I/O pin states. It is similar to an oscilloscope or logic analyzer. It can be controlled either from the command line or from the GUI. Currently only the digital state of I/O pins are supported.

To use the scope window, each scope channel being used must first be connected to the stimulus being tracked. This can only be done on the command line (or via the .sim directive in the .asm file). The following example shows how this is done, but note that in the .sim command the ""'s need to be escaped with a '\`.

```
**gpsim> scope.ch0 = 'portc3'  
**gpsim> scope.ch1 = 'portc4'
```

Once the data are captured, the scope window display may need to be altered to better see the data. In the GUI, the following keys can be used:

z	Zoom In
Z	Zoom out
l	Pan left
r	Pan right

In the command line, zooming and panning can be achieved by modifying the scope.start and scope.end variables.

## Chapter 4

# Scripting and Configuring

gpsim does not have a native scripting language per se. However it is possible to place gpsim commands into a file and load them later. This is useful for loading modules and stimuli and connecting various devices together. By convention, gpsim's configuration files have the extension *.stc*, for *startup configuration*.

### 4.1 Embedded Commands

If you're using gputils, it is possible to embed configuration commands directly into your PIC assembly source. The gputils supplied include file *coff.inc* contains several macros that embed simulation command into a COFF and COD files.

#### 4.1.1 *.sim* macro

```
; Simulator Command
.sim macro x
    .direct "e", x
endm
```

The *.sim* macro allows gpsim configuration commands to be embedded in the PIC source. While gpsim loads a *.cod* file, the commands in the *.sim* macros are collected. After the *.cod* file is loaded, the commands are redirected to gpsim's command line interpreter in the order they were received.

Here's an example of switch module being loaded and configured:

```
## Module libraries:
.sim "module library libgpsim_modules"
.sim "module load switch SW1"
.sim "SW1.state=false"
```

```
.sim "SW1.xpos = 216.0"
.sim "SW1.ypos = 156.0"
.sim "SW1.Ropen = 1.0e8"
```

This loads gpsim's module library, instantiates a switch module, and configures the switch's attributes.

### 4.1.2 .command macro

```
.command macro x
  .direct "c", x
endm
```

The *.command* macro is similar to a *.sim* macro except that it associates a gpsim command with a particular instruction. This is useful for changing attribute values at different points of the program.

### 4.1.3 .assert macro

```
; Assertion
.assert macro x
  .direct "a", x
endm
```

The *.assert* macro provides a source code mechanism for setting breakpoints (see chapter 5). An assertion is an expression associated with a specific instruction. It essentially means, "If the expression at this instruction evaluates to false, then halt the simulation."

```
; Close the switch. Because of capacitance, portc1 will go high after a delay:
; R=145, C=4.2e-6 TC=6.11e-4 or 1527 cycles, 0-2 volts requires 0.51 Tc
.command "SW1.state=closed"
  nop
  ; portc0 should be same as portc1
  .assert "(portc & 3) == 0, \"SW1 closed, cap holds low\""
  nop
```

In this example, the *.command* macro writes to the switch module's *.state* attribute (see section 8.1.8). Just prior to executing the first *nop* instruction, the switch will be closed. The *.assert* macro at the very next instruction makes sure that the expected state is seen on PORTC.

## 4.2 Sockets

gpsim supports a socket interface. This is inhibited by default. Advanced users may wish to study code in the *examples/scripts* subdirectory. This code is not distributed and is only available in the subversion repository.

## Chapter 5

# Assertions and Extended Breakpoints

gpsim supports a wide variety of breakpoints and assertions. Many of these were described with the `break` command. This section will illustrate how to extend the `break` command even further and introduce simulation assertions.

### Breakpoint Messages

A breakpoint message is an ASCII string that is displayed whenever a breakpoint is encountered. Any break point can have an associated message. The syntax at the command line is

```
break conditions, "This is a breakpoint message"
```

The conditions are described above in the `break` command and are the conditions under which the break occurs.

Breakpoint messages are useful for distinguishing among many different breakpoints.

```
break w counter & 0xf0 == 0x80, "Counter overflowed!"
```

In this example, the user is monitoring the upper nibble of the variable `counter` and breaking whenever it is equal to 8. When the command is entered, `gpsim` will display:

```
break when bit pattern 1000XXXX is written to register counter(0x26). break #: 0x20
```

The breakpoint can be queried with the `break` command:

```
gpsim> break 32
32: p18f452 register write value: [0x26] & 0xf0 == 0x8
    Message:Counter overflowed!
```

When the simulation encounters the break, execution halts and the message is printed.

## 5.1 Assertions and Embedded Simulation commands

gpsim's breakpoint design is a powerful tool that can catch many problems. The assertion design extends this power even further. An assertion is like a breakpoint that is defined in the program source code for a particular instruction. gpsim reads the breakpoint from a special message area in the .cod file. For example, you may have a routine that requires BANK 0 be selected. A gpsim assertion can be placed at the entry of the routine to verify that this is the case.

```
.assert "(status & 0x60) == 0, \"Bank 0 must be selected!\""
```

The syntax is identical to the extended breakpoint command. The expression is the condition that is checked. If the expression evaluates to false, then the code halts and prints the message. The *.assert* is a macro that is part of gputils. It requires a string as its input argument. Notice that the assertion message is embedded in the argument. gpasm and MPASM copy C's method of placing a backslash in front of quotations that are part of a string.

### Command Assertions

A command assertion is a gpsim associated with a particular instruction in your PIC source code. These are useful for changing the behavior of the simulation based on where the code executes. Almost any gpsim command can be placed in a command assertion. However, the most useful ones are assignment commands. For example:

```
.command 'SW1.state = open'
```

This assignment writes to the state attribute of a switch module named SW1.

## Chapter 6

# Trace and Log: What has happen?

Inspecting the current state of your program is sometimes insufficient to determine the cause of a bug. Often times it's useful to know the conditions that led up to the current state. gpsim provides a history or trace of everything that occurs - whether you want it or not - to help you diagnose these otherwise difficult to analyze bugs.

What's traced	notes
program counter	addresses executed
instructions	opcode
register read	value and location
register write	value and location
cycle counter	current value
skipped instructions	addresses skipped
status register	during implicit modification
interrupts	
break points	type
resets	type

The 'trace' command will dump the contents of the trace buffer.

A large circular buffer (whose size is hard coded) stores the information for the trace buffer. When it fills, it will wrap around and write over the old history. The contents of the trace buffer are parsed into frames, where one frame corresponds to a simulation cycle.

Here's an example of a trace output:

```

gpsim> trace
0x00000000000026F6 p18f452 0x001C 0x1003 iorwf  reg3,w,0
    Read: 0x00 from reg3(0x0003)
    Wrote: 0xE7 to W(0xFE8) was 0xE7
    Wrote: 0x18 to status(0xFD8) was 0x18
0x00000000000026F7 p18f452 0x001E 0xE1F4 bnz    $-0x16 ;(0x8)
0x00000000000026F8 p18f452 0x0008 0x3E00 incfsz reg,f,0
    Read: 0xE4 from reg(0x0000)
    Wrote: 0xE5 to reg(0x0000) was 0xE4
0x00000000000026F9 p18f452 0x000A 0xD004 bra    $+0xa ;(0x0014) 0x00000000000026FA p
0x00000000000026FB p18f452 0x0016 0x5000 movf   reg,w,0
    Read: 0xE5 from reg(0x0000)
    Wrote: 0xE5 to W(0xFE8) was 0xE7
    Wrote: 0x18 to status(0xFD8) was 0x18
0x00000000000026FC p18f452 0x0018 0x1001 iorwf  reg1,w,0
    Read: 0x03 from reg1(0x0001)
    Wrote: 0xE7 to W(0xFE8) was 0xE5
    Wrote: 0x18 to status(0xFD8) was 0x18

```

Each trace frame begins with a new simulation cycle. Typically this will include a simulated instruction. Here's each of the fields:

64-bit simulation cycle	processor	PC	opcode	instruction
0x00000000000026F6	p18f452	0x001C	0x1003	iorwf reg3,w,0

Other events that occur during the trace frame are indented. Typically these will be register read or write traces. The read traces show the value read. Write traces show the value written and the value that was previously in the register.

## Saving Trace to a file

The trace buffer may contain thousands of entries making it difficult to search. The trace save feature will allow the trace buffer to be written to a file.

```
gpsim> trace save mytrace.log
```

The entire contents of the trace buffer are decoded and written to the file. The format of the trace is the same as it is when displayed at the command line.

## Raw Traces

The *raw* trace buffer is the trace buffer displayed in a minimally decoded form. This is primarily used for gpsim development. When saved to a file, the raw trace is not

decoded at all. In addition, the processor's state is written to the file. Thus third party tools can be written to create custom trace reports<sup>1</sup>.

---

<sup>1</sup>FIXME - The dynamically created trace type information needs to be written to this file too. Without it, it is difficult to tell what each traced item is.



## Chapter 7

# Simulating the Real World: Stimuli

Stimuli are extremely useful, if not necessary, for simulations. They provide a means for simulating interactions with the real world.

The `gpsim` stimuli capability is designed to be accurate, efficient and flexible. The models for the PIC's I/O pins mimic the real devices. For example, the open collector output on port A of a PIC16C84 can only drive low. Multiple I/O pins may be tied to one another so that the open collector on port A can get a pull up resistor from port B. The overhead for stimuli only occurs when a stimulus changes states. In other words, stimuli are not polled to determine their state.

Analog stimuli are also available. It's possible to create voltage references and sources to simulate almost any kind of real world thing. For example, it's possible to combine two analog stimuli together to create signals like DTMF tones.

Note, however, that `gpsim` does not attempt to be a full electronic circuit simulator, and certain approximations made for efficiency will cause inaccuracy in complex simulation environments.

### 7.1 How They Work

In the simplest case, a stimulus acts a source for an I/O pin on a PIC. For example, you may want to simulate a clock and measure its period using TMR0. In this case, the stimulus is the source and the TMR0 input pin on the pic is the load. In `gpsim` you would create a stimulus for the clock using the `stimulus` command and connect it to the I/O pin using the `node` command.

In general, you can have several 'sources' and several 'loads' that are interconnected with nodes<sup>1</sup>. A good analogy is a spice circuit. The spice netlist corresponds to a

---

<sup>1</sup>Although, `gpsim` is currently limited to 'one-port' devices. In other words, it is assumed that ground serves as a common reference for the sources and the loads.

node-list in `gpsim` and the spice elements correspond to the stimuli sources and loads. This general approach makes it possible to create a variety of simulation environments. Here's a list of different ways in which stimuli may be connected:

1. Stimulus connected to one I/O pin
2. Stimulus connected to several I/O pins
3. Several stimuli connected to one I/O pin
4. Several stimuli connected to several I/O pins
5. I/O pins connected to I/O pins

The general technique for implementing stimuli is as follows:

1. Define the stimulus or stimuli.
2. Define a node.
3. Attach the stimuli to the node.

More often than not, the stimulus definition will reside in a file.

### 7.1.1 Contention among stimuli

One of the problems with this nodal approach to modeling stimuli is that it's possible for contention to exist. For example, if two I/O pins are connected to one another and driving in the opposite directions, there will be contention. `gpsim` resolves contention with attribute summing. Each stimulus - even if it's an input - has an effect on the node. This effect is characterised by a voltage and an impedance. When a node is updated, `gpsim` performs a Thevenin voltage summing of all the stimuli together. The resultant voltage is then propagated to all connected stimuli as the current state of the node.

For example, in the port A open collector / port B weak pull-up connection example, `gpsim` assigns a voltage of 5V with an impedance of 20kohms to the pull up resistor, and a voltage of 0V with an impedance of 150ohms to the open collector if it is active, or 100Mohms if it's not driving. The Thevenin sum will be roughly 0.05V if the output is driving, or 5V otherwise. Capacitive effects are not currently supported.

## 7.2 I/O Pins

`gpsim` models I/O pins as stimuli. Thus anywhere a stimulus is used, an I/O pin may be substituted. For example, you may want to tie two I/O pins to one another; like a port B pull up resistor to a port A open collector. `gpsim` automatically creates the I/O pin stimuli whenever a processor is created. All you need to do is to specify a node and then attach the stimuli to it. The names of these stimuli are formed by concatenating

the port name with the bit position of the I/O pin. For example, bit 3 in port B is called portb3.

Here's a list of the types of I/O pin stimuli that are supported:

I/O Pin Type	Function
INPUT_ONLY	Only accepts input (like MCLR)
BI_DIRECTIONAL	Can be a source or a load (most I/O pins)
BI_DIRECTIONAL_PU	PU=Pullup resistor (PORTB)
OPEN_COLLECTOR	Can only drive low (RA4 on c84)

There is no special pin type for analog I/O pins. All pic analog inputs are multiplexed with digital inputs. The I/O pin definition will always be for the digital input. gpsim automatically knows when I/O pin is analog input.

### 7.3 Asynchronous Stimuli

Asynchronous stimuli are analog or digital stimuli that can change states at any given instant (limited to the resolution of the cycle counter). They can be defined to be repetitive too.

parameter	function
start_cycle	The # of cycles before the stimulus starts
cycles[]	An array of cycle #'s
data[]	Stimulus state for a cycle
period	The # of cycles for one period
initial_state	The initial state before data[0]

When the stimulus is first initialized, it will be driven to the 'initial state' and will remain there until the cpu's instruction cycle counter matches the specified 'start' cycle. After that, the two arrays 'cycles[]' and 'data[]' define the stimulus' outputs. The size of the arrays are the same and correspond to the number of events that are to be created. So the event number, if you will, serves as the index into these arrays. The 'cycles[]' array define when the events occur while the 'data[]' array defines the states the stimulus will enter. The 'cycles[]' are measured with respect to the 'start' cycle. The asynchronous stimulus can be made periodic by specifying the number of cycles in the 'period' parameter.

Here's an example that generates three pulses and then repeats:

```
stimulus asynchronous_stimulus # or we could have used asy
# The initial state AND the state the stimulus is when
```

```
# it rolls over
initial_state 1
# all times are with respect to the cpu's cycle counter
start_cycle 100
# the asynchronous stimulus will roll over in 'period'
# cycles. Delete this line if you don't want a roll over.
period 5000
# Now the cycles at which stimulus changes states are
# specified. The initial cycle was specified above. So
# the first cycle specified below will toggle this state.
# In this example, the stimulus will start high.
# At cycle 100 the stimulus 'begins'. However nothing happens
# until cycle 200+100.
{ 200, 0,
  300, 1,
  400, 0,
  600, 1,
  1000, 0,
  3000, 1 }
# Give the stimulus a name:
name asy_test
# Finally, tell the command line interface that we're done
# with the stimulus
end
```

### 7.3.1 Analog Asynchronous Stimuli

Analog Asynchronous Stimuli are identical to Synchronous Stimuli except the data points are floating point numbers.

## 7.4 Extended Stimuli

Discuss the extended stimuli in the `modules/` directory. In particular, describe the *PulseGen* module and how it can completely replace the asynchronous stimuli. Also describe the *PullUp* and *PullDown* modules and how they can be manipulated into being general purpose DC voltage sources (FIXME, would it make sense to rename these modules?).

## 7.5 Limitations of the Stimulus Mechanism

The simulation of external devices using gpsim stimuli and nodes is intended to assist in PIC software debugging, not electronic circuit design. As such it takes a simplified approach to certain things.

### 7.5.1 Propagation Delays

gpsim makes no attempt to simulate propagation delays in the circuit. Usually this is not a problem. However, when using modules8 to expand gpsim's environment, it is possible to create situations where it matters. For example, daisy-chaining two or more shift registers with a shared clock relies on the propagation delay of the first register to ensure the second shifts the correct data in. Since gpsim does not simulate this delay, the results may be wrong<sup>2</sup>.

---

<sup>2</sup>They may be right, it depends on execution order, which is subtle.

## Chapter 8

# Modules

gpsim has been designed to debug microprocessors. However, microprocessors are always a part of a system. And invariably, the bugs one often encounters are those that are a result of interfacing with a system. Modules provide users with a way to extend gpsim and simulate a system. For example, the *system* may be a processor with a few pull up resistors and switches or it may be a processor and an LCD display. gpsim provides a few modules that one may use either for debugging or as templates for creating new modules.

Note that gpsim's modules are provided to facilitate debugging of the PIC code, not the hardware. gpsim does not attempt to be a circuit simulator by itself. If you need that functionality, the gpsim core can be embedded into third party simulators.

Modules reside in a library and are dynamically loaded with the *module* command. All modules have I/O pins which can connect to other modules or processors. Most modules provide *attributes* that allow the user to control a module's behavior or query its internal state. For example, the USART module has transmit and receive baud rate attributes that may be configured:

```
gpsim> U1.txbaud = 9600    # set the transmit rate
gpsim> U1.rxbaud          # query the receiver rate
9600
```

The symbol command can be used to query all attributes of a module.

```
gpsim> symbol U1.        # note the period
U1 = USARTModule
U1.console = false
U1.crlf = true
U1.loop = true
U1.rx = 0
U1.rxbaud = 9600
U1.tx = 0
```

```

U1.txbaud = 9600
U1.xpos = 72.00000000000000
U1.ypos = 276.00000000000000

```

Modules may provide help which can be accessed using the help command:

```

gpsim> help U1
USARTModule
no description

```

Well, the USART module isn't the best example here! However, a better example is one of the USART attributes.

```

gpsim> help U1.txbaud
9600
USART Module Transmitter baud rate

```

## 8.1 gpsim Modules

gpsim provides a library of useful modules for simulation. The current version includes the following modules:

pushbutton	Toggle push button
pullup	A resistor connected (nominally) to Vdd
pulldown	A resistor connected (nominally) to Vss
usart	A serial interface with a GUI terminal window
pulsegen	Stimulus designed to synthesize square waves.
FileStimulus	Stimulus taken from a file
FileRecorder	Record pin level and time to a file
PortStimulus	module with 8 IO pins
I2C-EEPROM2K	A 256 byte I2C serial EEPROM like the 24LC024.
I2C-EEPROM16K	A 2k byte I2C serial EEPROM like the 24LC16B.
I2C-EEPROM256K	A 32k byte I2C serial EEPROM like the 24LC256.
i2c2par	A slave I2C device with an 8 bit I/O port
switch	Switch, which connects two nodes together
and2	2-input logical AND gate
or2	2-input logical OR gate
xor2	2-input logical XOR gate
not	Inverter (logical NOT gate)
led_7segments	A 7-segment LED digit
led	A single pin LED which can be active either high or low
TTL377	A 74xx377 style 8-bit tristate latch
TTL165	A 74xx165 parallel-in-serial-out shift register
TTL595	A 74xx595 serial-in-parallel-out shift register

### 8.1.1 USART

The USART module is a full duplex configurable USART. In graphics mode, the USART will display its output in a console. In addition, the console will accept keyboard input.

#### Attributes

`.tx` - The `.tx` attribute is the USART transmit register. Data written to this attribute will initiate a transmission. The USART supports a transmit FIFO, making it possible to stuff several bytes into the transmit queue while the program under test is paused.

`.rx` - The `.rx` attribute is the USART receiver register. Data received by the USART is available for querying through here.

`.txbaud` - The `.txbaud` attribute specifies the transmitter baud rate.

`.rxbaud` - The `.rxbaud` attribute specifies the receiver baud rate.

`.console` - When set to `true`, the console window will display received data and will accept keyboard entries for the transmitter.

`.crlf` - When set to `true`, carriage returns and line feeds generate new lines in the console window.

`.hex` - When set to `true`, the data is assumed to be binary and all bytes are shown in hex.

`.loop` - When set to `true`, received characters are looped back to the transmitter.

`.xpos` - horizontal position in breadboard window.

`.ypos` - vertical position in breadboard window.

#### I/O Pins

`.TXPIN` - transmit pin

`.RXPIN` - receiver pin

`.CTS` - Clear to send pin. This can be left unconnected

`.RTS` - Request to send pin.

### 8.1.2 pulsegen

This a stimulus designed to synthesize periodic or once off square waves.

It has the following attributes:

`.set` - Cycle where output first goes high

`.clear` - Cycle where output first goes low

`.delete` - Edge at this cycle is ignored

`.period` - Period in cycles when stimulus repeats



The set and clear attributes generate the edge states.

For example if the module is instantiated as PG, then

```
gpsim> PG.set = 0x1000
```

```
gpsim> PG.clear = 0x2000
```

generate a rising edge at cycle 0x1000 and a falling edge at cycle 0x2000. Any number of edges can be specified and they may be in any order. The delete attribute removes an edge:

```
gpsim> PG.delete = 0x2000 # remove the edge at cycle 0x2000
```

The period attribute tells how many cycles there are in a rollover. If period is 0, then the pulsegen is not periodic. If there are edges beyond the period time, then those will be ignored.

### 8.1.3 FileStimulus

.file - Name of input file.

.pin - Output pin

.xpos - module x position on breadboard

.ypos - module y position on breadboard

The input file contains two columns of data separated by one or more tabs and/or spaces.

The first column is the cycle in base 10. The second column is the pin drive voltage.

### 8.1.4 FileRecorder

.file - name of file or pipe to write data to

.digital - is the signal digital (true) or analog (false)

.pin - Input pin .xpos - module x position on breadboard

.ypos - module y position on breadboard

The first column is the cycle that the pin state changes.

If .digital=true, second column is pin state - high(1) or low(0)

If .digital=false (default), second column is the input pin voltage. This mode makes output suitable for input to FileStimulus.

### 8.1.5 PortStimulus

The PortStimulus module provides an 8 bit IO port similar to processor ports.

.portAdr - Output port register address

.trisAdr - Tristate register address

.latAdr - Output latch address

```

.pullupAdr - Pullup register address
.p1-.p8 - IO pins
.xpos - module x position on breadboard
.ypos - module y position on breadboard
Assuming the module is loaded with name P1, first declare data memory
resgisters as follows:
UDATA 0x10
P1_Port RES 1
P1_Trise RES 1
P1_Lat RES 1
P1_Pullup RES 1
GLOBAL P1_Port, P1_Trise, P1_Lat, P1_Pullup
...
;# specify the PortStimulus addresses. ;
These are the PIC addresses to where the PortStimulus ;
registers are mapped.
.sim "P1.portAdr = &P1_Port"
.sim "P1.triseAdr = &P1_Trise"
.sim "P1.latAdr = &P1_Lat"
.sim "P1.pullupAdr = &P1_Pullup"
Then to access the module register just do operations on the relevant data
registers. i.e. movwf P1_Lat

```

### 8.1.6 Logic

The only attributes supported by the logic devices are the standard *.xpos* and *.ypos* breadboard positions. FIXME There should be attributes to specify the switching characteristics.

#### and2 - Two input AND gate

##### I/O pins

```

.in0 - First input
.in1 - First input
.out - Output

```

**or2 - Two input OR gate**

.in0 - First input  
.in1 - First input  
.out - Output

**xor2 - Two input XOR gate**

.in0 - First input  
.in1 - First input  
.out - Output

**not - Inverter**

.in0 - Input  
.out - Output

**TTL377 - Octal Latch**

The TTL377 module simulates an 8-bit parallel latch with output enable. It latches all bits simultaneously so that connecting an output to an input gives correct results. However, this is not guaranteed where multiple modules are so connected.

.D0..7 - Input  
.Q0..7 - Output  
.E - output enable  
.CP - clock (rising edge)

**TTL165 - Parallel to Serial Shift Register**

The TTL165 module simulates an 8-bit parallel input serial output shift register. It is particularly useful for connecting to a SPI peripheral. Note, however, that the common practice of daisy-chaining such shift registers is not guaranteed to simulate correctly.

.D0..7 - parallel input  
.Ds - daisy-chain serial input  
.Q7 - output  
.nQ7 - inverted output  
.CE - clock enable  
.CP - clock (rising edge)  
.PL - parallel load

## TTL595 - Serial to Parallel Shift Register

The TTL595 module simulates an 8-bit serial input parallel output shift register. It is particularly useful for connecting to a SPI peripheral. Note, however, that the common practice of daisy-chaining such shift registers is not guaranteed to simulate correctly.

- .Q0..7 - parallel output
- .Ds - serial input
- .Qs - daisy-chain serial output
- .OE - output enable (low for output, high for Z state)
- .SCK - shift clock (rising edge)
- .RCK - output latch clock (rising edge)
- .MR - Shift register reset (clear on low)

### 8.1.7 I2C EEPROM

There are currently three I2C EEPROMs supported: I2C-EEPROM2k, I2C-EEPROM16k, and I2C-EEPROM256K.

The commands 'dump e module\_name filename' and 'load e module\_name filename' can be used to save and restore the contents of the EEPROM module. This allows the contents of the EEPROM to be preserved between runs of gpsim.

The cells of the EEPROM can be examined and modified using the command interface with the commands 'module\_name.eeData[index]' and 'module\_name.eeData[index] = new\_value'. The following example shows loading an EEPROM module, setting cell 16 to '0' (0x30) and checking that the new value was written.

```
**gpsim> module load I2C-EEPROM16k e2
**gpsim>
**gpsim> e2.eeData[16] = $30
**gpsim> e2.eeData[16]
e2.eeData[$10] = $30
**gpsim>
```

#### I/O Pins

- .A0 - Chip select to set bit 0 of slave address
- .A1 - Chip select to set bit 1 of slave address
- .A2 - Chip select to set bit 2 of slave address
- .SCL - I2C serial clock
- .SDA - I2C serial data
- .WP - Hardware write protect

### 8.1.8 Switches & Resistors

The *switch* module is a model of a simple two terminal switch. It may be controlled either from the command line or the breadboard GUI. The *switch* module's open and closed resistance are controlled by attributes. Thus a two terminal resistor can be modeled as a switch that is always closed (or open).

#### Attributes

.Ropen - Switch resistance in ohms when the switch is opened.

.Rclosed - Switch resistance in ohms when the switch is closed.

.state - Switch state. The switch state takes the values of *open* or *closed*, although *false* for open and *true* for closed is supported for backward compatibility. The *.state* attribute is writable.

#### I/O Pins

.A - One side

.B - The other side

### 8.1.9 Voltage Sources, Resistors, and Capacitors

The *pullup* and *pulldown* modules are two terminal devices with one terminal tied to a voltage source. Their voltage, resistance, and pin capacitance are controllable via attributes.

#### Attributes

.voltage - DC voltage

.resistance - resistance in ohms between the I/O pin and the voltage source.

.capacitance - capacitance in farads between the I/O pin and ground.

#### I/O Pins

.pin - the only pin exposed.

### 8.1.10 LED\_7SEGMENTS and LED

#### led\_7segments - 7 segment common cathode LED display

The segments are numbered as per the following figure.

```

      ---
5 | 0 | 1
      ---
4 | 6 | 2
      ---
      3

```

**I/O Pins**

.cc - common cathode  
 .seg0 - segment 0  
 .seg1 - segment 1  
 .seg2 - segment 2  
 .seg3 - segment 3  
 .seg4 - segment 4  
 .seg5 - segment 5  
 .seg6 - segment 6

**Led - Simple LED**

The simple LED is a single pin module internally tied to either Vss or Vdd. By default the LED is internally tied to Vdd(0V) and turns on when the pin is driven high. However, by setting the ActiveState parameter to low, the LED is internally tied to Vss(5V) and turns on when the pin is driven low. Like a real LED, the module will either sink or source current from the driving line which may affect its logic level.

The LED color is by default red, but can be set to other colors.

**Attributes**

color - LED color, possible values red, green, yellow, orange or blue  
 ActiveState - LED active state mode, possible values: high or low

**I/O Pin**

.in - drives LED

**8.1.11 I2C slave to Parallel port**

The i2c2par is a 7 bit address I2C module with an 8 bit I/O port. The direction of the I/O port is determined from I2C R/ $\bar{W}$  bit. When R/ $\bar{W}$  is zero the I/O port outputs the data sent by the master device. Otherwise the port is set as an input port and when the master device requests data, the port is read and transmitted to the master.

**Attributes**

.Slave\_Address - I2C 7 bit device address

**I/O Pins**

.p0..7 - I/O pins

.SDA - I2C serial data

.SCL - I2c serial clock

**8.2 Extras Modules**

In addition to the standard modules, modules largely supplied by third parties are supplied in the libgpsim\_extras library.

Name	Alias	Description
dht11	dht11	Temperature and humidity sensor
DS1307	ds1307	64 x 8, Serial, I2C Real-Time Clock
DS1820	ds1820	High-Precision 1-Wire Digital Thermometer
DS18S20	ds18s20	High-Precision 1-Wire Digital Thermometer
DS18B20	ds18b20	High-Precision 1-Wire Digital Thermometer
lcd_display	lcd_2X20	LCD - HD44780 2X20
lcd_20x4	lcd_20x4	LCD - HD44780 4x20
lcd_dt161A	lcd_2X8	LCD - HD44780 2x8
LCD100X32	LCD100X32	LCD - SED1530 100x32
OSRAM128X64	OSRAM128X64	LCD - SSD0323 128x64
lcd_7Seg	lcd_7seg	LCD - 7 segment no controler
Solar	Solar	Solar Panel, Controler, Battery

**8.2.1 Temperature and humidity sensor - DHT11**

This module emulates the DHT11 temperature/humidity sensor using a single-wire interface.

**Attributes**

temperature - Temperature degree C \* 100

humidity - Relative humidity % \* 100

**I/O Pins**

.pin - Serial I/O pin

### 8.2.2 64 x 8, Serial, I2C Real-Time Clock - DS1307

This module emulates the Dallas Semiconductor DS1307 Real-Time clock which also has 56 x 8 eeprom memory and connects via an I2C serial bus.

#### I/O Pins

.SDA - Serial Data Line I/O pin  
 .SCL - Serial Clock Line I/O pin  
 .SQW - Square Wave Output

### 8.2.3 High-Precision 1-Wire Digital Thermometer - DS1820 Family

These modules emulate the DS1820, DS18S20 and DS18B20 High-Precision 1-Wire Digital Thermometers. These devices use a single-wire bus interface.

#### Attributes

ROMCode - Device ROM code  
 temperature - Temperature of device  
 powered - Device is self powered  
 alarm\_th - Temperature high alarm register  
 alarm\_tl - Temperature low alarm register  
 config\_register - Value of configuration register (ds18B20 only)

#### I/O Pins

.pin - Serial I/O pin

### 8.2.4 Character LCD - HD44780

The library libgpsim\_lcd contains several LCD display formats using the HD44780 controller.

Name	Description
lcd_display	20 col 2 row LCD
lcd_20x4	20 col 4 row LCD
lcd_dt161A	16 col 1 row LCD



**I/O Pins**

.DC - Data / command select  
 .RW - Read/Write select  
 .E - start data read/write  
 .d0-7 - data bus

**8.2.5 Graphic LCD - SED1530**

This module emulates a 100X32 pixel graphics LCD based on dual SED1350 controllers.

**8.2.6 LCD\_7Seg**

A 7 segment LCD display without a controller. If common > 2.5V, (cc- segn) > 1.4V segment is on otherwise segment is off.

The segments are numbered as per the following figure.

```

      ---
    5 | 0 | 1
      ---
    4 | 6 | 2
      ---
      3
  
```

**I/O Pins**

.cc - common  
 .seg0-6 - 7 segment drives

**8.2.7 Solar**

This module emulates a 20 Watt solar panel, a 20mah battery, and a PWM controller for testing control strategies for the controller.

**Attributes**

Aoffset - Voltage on Asol pin for zero panel current  
 Ascale - Voltage/Amp panel current scale factor for Asol  
 VSscale - scale factor for Vsol pin  
 VBscale - scale factor for Vbat pin  
 inductor - controller inductor size in Henries  
 BDOC - Battery degree of charge %

**I/O Pins**

.Vsol - Solar Panel output Voltage  
 .Asol - Solar Panel output current  
 .Vbat - Battery Voltage  
 .PWM - Pulse Width Modulation signal  
 .OK - PWM is enabled

**8.3 Writing new modules**

A module is a library of code. On Windows the library is a .DLL and on Unix a shared library. There are a few details that a module must adhere to, but in general the module has full access to gpsim's API.

The easiest way to write a new module is to start from the source code from one of the existing modules. For example, suppose your project produces a serial bit-stream in PPM coding and you want to display the output during the simulation. The external module you need is similar to the usart module but not the same, so start by making a copy of the usart module and then modify it to work how you need.

To be able to load your module into gpsim it needs to be in a library. Usually you will be creating a new library just for one device, but sometimes you will have a few devices. Either way, the library must declare to gpsim what devices it contains. This is achieved with an array of Module\_Types class instances, returned to gpsim by a function named "get\_mod\_list". All gpsim module libraries must declare this function. You can copy the required template from the gpsim source – probably one of the "extras" modules is slightly cleaner than the main library. For our PPM decoder example, we might have a module\_manager.cc containing the following code:

```

/* IN_MODULE should be defined for modules */
#define IN_MODULE
#include <stdio.h>
#include <gpsim/modules.h>
#include "ppm.h"
Module_Types available_modules[] =
{
  { "ppm_display", "ppm_rx_iface", PpmDisplay::construct},
  // No more modules
  { NULL,NULL,NULL}
};
#ifdef __cplusplus
extern "C" {
#endif /* __cplusplus */
/*****
* get_mod_list - Report all of the modules in this library.

```

```

*
* This is a required function for gpsim compliant libraries.
*/
Module_Types * get_mod_list(void)
{
    return available_modules;
}
#ifdef __cplusplus
}
#endif /* __cplusplus */

```

This declares that this library provides one module, called `ppm_display`, implemented by the C++ class `PpmDisplay`. The class which implements the module must provide a static method “construct” to create a new instance of the class. For example:

```

Module * PpmDisplay::construct(const char *_new_name=0)
{
    PpmDisplay *ppmd = new PpmDisplay(_new_name);
    ppmd->create_iopin_map();
    ppmd->create_window(_new_name);
    return ppmd;
}

```

Your module will need to include stimuli for its I/O connections. You can use the standard `gpsim` stimulus classes: `IOPIN`, `io_bidirectional`, `io_bidirectional_pu`, `io_open_collector`. In many cases, however, you will want to derive your own class from one of them. This will allow you to customise the actions when the node state changes. For example:

```

class DecoderPin : public IOPIN
{
private:
    PpmDisplay * Parent;
public:
    DecoderPin ( PpmDisplay * parent, unsigned int b, const char * name=0 );
    virtual void setDrivenState(bool new_state);
};

```

The only methods we provide here are the constructor and an overridden “setDrivenState”. This is because our PPM decoder needs to be told when the input pin changes state.

## Chapter 9

# Symbolic Debugging

gpsim maintains a symbol table.

<write me>

## **Chapter 10**

# **Macros**

<write me>

# Chapter 11

## Hex Files

The target code simulated by gpsim can be supplied by a hex file, or more specifically an Intel Hex file. gpsim accepts the format of hex provided by gpasm and mpasm. The hex file does not provide any symbolic information. It's recommended that hex files only be used if 1) you suspect there's a problem with the way .cod files are generated by your assembler or compiler OR 2) your assembler or compiler doesn't generate .cod files. Also, you must supply a processor when loading hex files. See the load command.

## Chapter 12

# The ICD- Not Supported in versions 0.21.0 and later

gpsim supports (partly) the first version of the ICD (as opposed to ICD2 (the round hockey-puck shaped one)).

### Special configuration of the code

Read the MPLAB ICD USER's GUIDE.

Here's the short version:

- disable at least: brown out detection, low voltage programming and all code protection. It is probably good to turn of the watchdog too. see the MPLAB ICD USER's GUIDE for more information.
- have a NOP as the first instruction.
- Don't touch RB6 or RB7.
- Don't use the last stack level.
- Don't use these registers and program words:

Processor	Register	Program
-870/1/2	0x70, 0xBB-0xBF	0x6E0-0x7FF
-873/4	0x6D, 0x1fD, 0xEB-0xF0, 0x1Eb-0x1F0	0xEE0-0xFFF
-876/7	0x70, 0x1Eb-0x1Ef	0x1F00-0x1FFF

### icdprog

Download and install icdprog.

Use icdprog to program the target with the hex file (*icdprog mycode.hex*).

## ICD usage

Start gpsim like this:

```
gpsim -d /dev/ttyS0 -s mycode.cod
```

, assuming the ICD is connected to the first serial port.

Now you can type 'icd' to see some information:

```
**gpsim> icd
ICD version "2.31.00" was found.
Target controller is 16F877 rev 13.
Vdd: 5.2 Vpp: 13.3
Debug module is present
```

2.31 is the firmware version. I have only tried this particular version...

You can step, reset, run, halt, set the breakpoint and read file registers. It works both from the GUI and the cli.

## ICD TODO

- MPLAB has a setting for target CPU frequency, I have only tried with a 20MHz crystal, so there may be adjustments to be made to the serial port timeout settings in gpsim.
- The source, disassembly, watch, symbol and RAM windows works. And the rest doesn't. I guess the breadboard should be able to work at least for the pic, but it doesn't.
- EEPROM support
- modifying data
- Fix the UI to give more feedback about what's happening during long delays.
- Better error detection. gpsim doesn't always see that the target is not functional.



# Chapter 13

## Examples

The *examples/* subdirectory contains several examples. The *examples/projects/* subdirectory demonstrate sample projects that can serve as templates for new projects. In addition, the *examples/modules* subdirectory contains several examples illustrating how to use gpsim's various modules. Finally, as described in chapter ??, gpsim's regression tests illustrate many powerful debugging techniques that have not been fully documented.

### **usart\_gui example**

Each example contains a brief *README* explaining its purpose. For example, the *README* for the *usart\_gui* example in the *examples/modules* directory contains

The tests the USART module with the GUI fix.

The code for a 16f628 PIC is used. The code first transmits a string of characters, which are instructions to the user, to the USART module which will then be displayed on its GUI. This verifies that the USART can receive serial data.

When the focus is on the USART GUI window, characters typed on the keyboard are sent from the USART to the PIC and then retransmitted from the PIC back to the USART.

If all works, the typed characters will be displayed in the GUI text window of the USART. Both transmit and receive must be functioning for this to happen.

*Fixme* - we really need to document all of the examples!

## Chapter 14

# Regression Tests

Starting with version 0.22.0, gpsim distributes regression tests. The purpose of a regression test is to validate correctness. The tests are designed to exercise many of the aspects of gpsim and gpsim's modules. While designed primarily for developers, the regression tests also serve as a rich source of examples. There are many features gpsim's developers will tuck away into a regression test and fail to document!

## Chapter 15

# Theory of Operation

This section is only provided for those who may be interested in how gpsim operates. The information in here is 'mostly' accurate. However, as gpsim evolves so do the details of the theory of operation. Use the information provided here as a high level introduction and use the (well commented :) source to learn the details.

### 15.1 Background

gpsim is written mostly in C++. Why? Well the main reason is to easily implement a hierarchical model of a pic. If you think about a microcontroller, it's really easy to modularize the various components. C++ lends itself well to this conceptualization. Furthermore Microchip, like other microcontroller manufacturers, has created families of devices that are quite similar to one another. Again, the C++ provides 'inheritance' that allows the relationships to be shared among the various models of pics.

### 15.2 Instructions

There's a base class for the 14-bit instructions (I plan to go one step further and create a base class from which all pic instructions can be derived). It primarily serves two purposes: storage that is common for each instruction and a means for generically accessing virtual functions. The common information consists of a name - or more specifically the instruction mnemonic, the opcode, and a pointer to the processor owning the instruction. Some of the virtual functions are 'execute' and 'name'. As the hex file is decoded, instances of the instructions are created and stored in an array called `program_memory`. The index into this array is the address at which the instruction resides. To execute an instruction the following code sequence is invoked:

```
program_memory[pc->value]->execute();
```

which says, get the instruction at the current program index (`pc->value`) and invoke via the virtual function `execute()`. This approach allows execution break points to be easily set. A special break point instruction can replace the one residing in the program memory array. When `'execute'` is called the break point can be invoked.

### Program memory

Note that in the above discussion, the `pc->value` is referred to as the “program index”. On the 12-bit and 14-bit PIC cores this is unambiguous as the program memory is instruction-word-wide and the program counter increments by one for each instruction. On the PIC17 and PIC18 cores, however, the program memory is accessible through the `TBLPTR` in byte-wide form. The program counter increments by two for each instruction.

The `program_memory` array in `gpsim` is always an array of instructions. Thus the `pc->value` on a PIC18 is an index whose value is half of the PC register-triple value.

## 15.3 General File Registers

A file register is simulated by the `'file_register'` class. There is one instance of a `'file_register'` object for each file register in the PIC. All of the registers are collected together into an array called `'registers'` which is indexed by the registers' corresponding PIC addresses. The array is linear and not banked like it is in the PIC. (Banking is handled during the simulation.)

## 15.4 Special File Registers

Special file registers are all of the other registers that are not general file registers. This includes the core registers like `status` and `option` and also the peripheral registers like `eadr` for the EEPROM. The special file registers are derived from the general file registers and are also stored in the `'registers'` array. There is one instance for each register - even if the register is accessible in more than one bank. So for example, there's only one instance for the `'status'` register, however it may be accessed through the `'registers'` array in more than one place.

All file registers are accessed by the virtual functions `'put'` and `'get'`. This is done for two main reasons. First, it conveniently encapsulates the breakpoint overhead (for register breakpoints) in the file register and not in the instruction. Second, and more important, it allows derived classes to implement the `put` and `get` more specifically. For example, a `'put'` to the `indf` register is a whole lot different than a `put` to the `intcon` register. In each case, the `'put'` initiates an action beyond simply storing a byte of data in an array. It also allows the following code sequence to be easily implemented:

```
movlw   trisa    ;Get the address of tris
movwf   fsr
movf    indf,w  ;Read trisa indirectly
```

## 15.5 Example of an instruction

Here's an example of the code for the movf instruction that illustrates what has been discussed above. Somewhere in gpsim the code sequence:

```
program_memory[pc->value]->execute();
```

is executed. Let's say that the pc is pointing to a movf instruction. The ->execute() virtual function will invoke MOVF::execute. I've added extra comments (that aren't in the main code) to illustrate in detail what's happening.

```
void MOVF::execute(void)
{
    unsigned int source_value;

    // All instructions are 'traced' (discussed below). It's sufficient
    //to only store the opcode. However, even this may be unnecessary since
    //the program counter is also traced. Expect this to disappear in the
    //future...
    trace.instruction(opcode);

    // 'source' is a pointer to a 'file_register' object. It is initialized
    //by reading the 'registers' array. Note that the index depends on the
    //'rp' bits (actually just one bit) in the status register. Time is
    // saved by caching rp as opposed to decoding the status register.
    source = cpu->registers[cpu->rp | opcode&REG_IN_INSTRUCTION_MASK];

    // We have no idea which register we are trying to access and how it
    //should be accessed or if there's a breakpoint set on it. No problem,
    //the virtual function 'get' will resolve all of those details
    // and 'do the right thing'.
    source_value = source->get();

    // If the destination is W, then the constructor has already initialized
    //'destination'. Otherwise the destination and source are the same.
    if(opcode&DESTINATION_MASK)
        destination = source;    // Result goes to source

    // Write the source value to the destination. Again, we have no idea
    // where the destination may be or
    // or how the data should be written there.
    destination->put(source_value);

    // The movf instruction will set Z (zero) bit in the status register
    //if the source value was zero.
    cpu->status.put_Z(0==source_value);
```

```
// Finally, advance the pc by one.  
cpu->pc->increment();  
  
}
```

## 15.6 Trace

Everything that is simulated is traced - *all* of the time. The trace buffer is one huge circular buffer of integers. Information is or'ed with a trace token and then is stored in the trace buffer. No attempt is made to associate the items in the trace buffer while the simulator is simulating a PIC. Thus, if you look at the raw buffer you will see stuff like: cycle counter = ..., opcode fetch = ..., register read = ..., register write = ..., etc. However, this information is post processed to ascertain what happened and when it happened. It's also possible to use this information to undo the simulation, or in other words you can step backwards. I don't have this implemented yet though.

## 15.7 Breakpoints

Breakpoints fall into three categories: execution, register, and cycle.

### Execution:

For execution breakpoints a special instruction appropriately called 'Breakpoint\_Instruction' is created and placed into the program memory array at the location the break point is desired. The original instruction is saved in the newly created breakpoint instruction. When the break point is cleared, the original instruction is fetched from the break point instruction and placed back into the program memory array.

Note that this scheme has zero overhead. The simulation is only affected when the breakpoint is encountered.

### Register:

There are at least four different breakpoint types that can be set on a register: read any value, write any value, read a specific value, or write a specific value. Like the execution breakpoints, there are special breakpoint registers that replace a register object. So when the user sets a write breakpoint at register 0x20 for example, a new breakpoint object is created and insert into the file register array at location 0x20. When the simulator attempts to access register location 0x20, the breakpoint object will be accessed instead.

Note that this scheme too has zero overhead, except when a breakpoint is encountered.

**Cycle:**

Cycle breakpoints allow `gpsim` to alter execution at a specific instruction cycle. This is useful for running your simulation for a very specific amount of time. Internally, `gpsim` makes extensive use of the cycle breakpoints. For example, the `TMR0` object can be programmed to generate a periodic cycle break point.

Cycle break points are implemented with a sorted doubly-linked list. The linked list contains two pieces of information (besides the links): the cycle at which the break is to occur and the call back function<sup>1</sup> that's to be invoked when the cycle does occur. The break logic is extremely simple. Whenever the cycle counter is advanced (that is, incremented), it's compared to the next desired cycle break point. If there's NO match, then we're done. So the overhead for cycle breaks is the time required to implement a comparison. If there IS a match, then the call back function associated with this break point is invoked and the next break point in the doubly-linked list serves as the reference for the next cycle break.

## 15.8 TIMER1 External input

The `timer1` module can support external input, on some processors, as either a crystal using two pins or a single pin drive.

### External Crystal

If an external crystal, typically 32,768 KHz, is being used, then both `T1OSCEN` and `TMR1CS` in register `T1CON` should be true. `Gpsim` will then automatically simulate `timer1` being driven at the crystal frequency which can be changed from the default frequency by changing the value of the processor symbol called `tmr1_freq`.

### Single pin drive

If the single pin drive is being used, then the `T1CON` register bits for `T1OSCEN` should be false and `TMR1CS` true, and the `T1CKI` pin must be driven manually such as by a `stimuli` command.

---

<sup>1</sup>A call back function is a pointer to a function. In this context, `gpsim` is given a pointer to the function that's to be invoked (called) whenever a cycle break occurs.

## Chapter 16

# LICENSES

### 16.1 Gpsim.lyx

Copyright ©2000-2010

T. Scott Dattalo, Ralf Forsberg, Robert Pearce, Borut Razem and Roy Rankin

The source of this document is gpsim.lyx.

This document is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License published by the Free Software Foundation; either version 2, or (at your option) any later version.

This document is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with gpsim; see the file COPYING. If not, write to the Free Software Foundation, 59 Temple Place - Suite 330, Boston, MA 02111-1307, USA.

### 16.2 Gpsim

The Gpsim program is licensed under version 2 or higher of the GNU General Public License. Details of this license can be found in the COPYING file which should have come with this program. If not the license can be found at <http://www.gnu.org/licenses/gpl-2.0.html>.

### 16.3 Libraries libgpsim, libgpsim\_modules, libgpsim\_eXdbm

The libraries libgpsim, libgpsim\_modules, and libgpsim\_eXdbm are licensed under version 2.1 of the GNU Lesser General Public License. Details of this license can be



found in the COPYING.LESSER file which should have come with the program. If not, the license can be found at <http://www.gnu.org/licenses/lgpl-2.1.html>.

# Index

7SEGMENTS, 52

and2, 49  
attach, 10

break, 10, 11  
bus, 10

Capacitors, 52  
clear, 10, 13

DHT11, 54  
disassemble, 10, 14  
DS1307, 55  
DS1820 Family, 55  
dump, 10, 14

echo, 15

FileRecorder, 48  
FileStimulus, 48  
frequency, 10, 15

GNU GPL, 71

HD44780, 55  
help, 10, 15

I2C EEPROM, 51  
i2c2par, 53  
icd, 10, 15  
instructions, 66

LCD\_7Seg, 56  
LED, 52  
list, 10, 15  
load, 10, 16  
log, 10  
Logic, 49

macros, 16  
module, 10, 18  
Modules, 45

node, 10, 19  
not, 50

or2, 50

PortStimulus, 48  
processor, 10, 20  
pulsegen, 47

quit, 10, 20

registers, 67  
Resistors, 52  
run, 10, 20

SED1530, 56  
set, 10  
Solar, 56  
step, 10, 20  
Stimulus, 40  
stimulus, 10, 21  
stopwatch, 10, 22  
Switches, 52  
symbol, 10, 21

trace, 10, 23  
ttl165, 50  
ttl377, 50  
ttl595, 51

USART module, 47

version, 10  
Voltage Sources, 52

x, 10, 23  
xor2, 50